

# Sandbags

## Sandbag Suppliers

### **US Corps of Engineers**

180<sup>th</sup> 5<sup>th</sup> Street E  
Suite 700  
St. Paul, MN 55101  
Phone: (651) 290 5200  
Emergency Response: (651) 290 5205

### **Progressive Innovations LLC**

34064 Highway 47 NW  
Cambridge, MN 55008  
Phone: (612) 390-5836  
Will Hagfors: 877-725-1473  
Will Cell: 763-238-0178

### **Minnesota State and Federal Surplus Services**

5420 Old Highway 8  
(I-35W and County Rd I)  
Arden Hills, MN 55112  
Phone: 651-639-4022  
Fax: 651-639-4026

### **Berg Bag Company**

410 3rd Avenue N  
Minneapolis, MN 55401  
Phone: 612-332-8854 or 800-658-7201  
After Hours: 612-933-3897 or 612-599-1596  
Don: 612-332-8845

Maintains a good supply of bags on hand, mostly poly. Could ship same day, if needed. Ship FOB Minneapolis, MN. Large quantities they fabricate as ordered. Prices range anywhere from \$.15 to \$.35 each depending on type and quantity. Government specification treated burlap bags are available for \$.15 to \$.35 each.

### **Miller Bag Company**

861 East Hennepin Avenue  
Minneapolis, MN 55414-1201  
(612) 623-0459

### **Jacob's Trading Company**

8090 Excelsior Blvd.  
Hopkins, MN 55343  
Phone: (763) 843-2000  
Fax: (763) 843-2101  
Contact: Scott Armstrong

Maintains a very large supply of poly bags in Minnesota and many other locations. Bags sized 14" x 26".

**Murphy Sales Company**

435 Ford Road  
Minneapolis, MN 55426  
Phone: 952-540-0755 or 800-328-5876  
After Hours: David Allen - 952-541-9855  
Fax: 952-540-0752

Large stocks of treated sandbags currently on hand (14" x 27") 10 oz, burlap, government specification with tie cords. Prices as follows: 500-5,000 \$.47 each; 5,500-15,000 \$.42 each; 15,500-25,000 \$.40 each; 25,500-50,000 \$.38 each; 50,500-90,000 \$.37 each. Buyer pays transportation cost under 50,000 bags. Also has woven poly bags (14" x 26") with ties. For woven poly prices, contact direct.

**WirthCo Engineering Inc**

7491 Cahill Road  
Minneapolis, MN 55439  
Phone: 952-941-9073  
Toll Free: 1-800-959-0879  
Fax: 952-941-0659

**Northern Box and Bag Company**

311 S. 4<sup>th</sup> Street, Suite 109  
PO Box 5606  
Grand Forks, ND 58206  
Phone: 701-746-6764  
24 Hours: 800-551-6982  
Fax: 701-772-3066

14" X 26" Woven Poly Sandbags with Ties – White Fabric – 1,000 bags per bale. Priced: 1,000-9,000 = \$140/M (14 cents each) FOB: West Fargo, ND; 10,000-99,000 = \$128/M (12.8 cents each) FOB: Destination; 100,000-250,000 = \$120/M (12 cents each) FOB: Destination; For orders more than 250,000 call office.

**Farber Bag and Supply Company**


8733 Kapp Drive  
Peosta, IA 52068  
Toll Free: 800-553-9068  
Main: 563-583-6304  
Fax: 563-583-0762  
Jim Faber Cell: 563-663-7763  
Jim Faber Home: 563-588-4591

**NYP Corporation**

4810 Inlet Bay Drive  
Mandan, ND 58554  
Mark: 908-764-9569  
Phone/Fax: 701-663-5982

# Sandbagging Information

AE-626 (Revised)

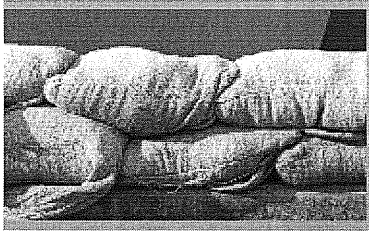

## Sandbagging for Flood Protection

Kenneth Hellevang, Extension Engineer

A sandbag dike must be built properly to prevent or reduce flood damage.

Bags are made from various materials, but the most common is woven polypropylene. They usually measure about 14 inches wide and 24 to 26 inches long. Other sizes of bags also are available, but bags are easier to handle if their weight with filling in them is limited to 35 to 40 pounds.

Sand is the easiest material for filling and shaping sandbags. Silt and clay in bags will form a good dike, but working with those materials is more difficult. Fill sandbags slightly more than one-half full.

### Estimate Sandbags Needed

Build the dike at least 1 foot higher than the projected crest level to allow for fluctuations in the water level. Local experience will assist in determining the amount of freeboard to provide.

The U.S. Army Corps of Engineers recommends building a dike with a width at the base that is three times the dike height. For example, a 4-foot-high dike would have a base width of 12 feet. The corps indicates that each foot of finished dike length requires one bag, each foot of height requires three bags, and each 2.5 feet of width requires three bags. This results in each bag having placed dimensions of about 4 inches high by 10 inches wide by 16 inches long.

Dimensions of a dike that is twice as wide as it is tall.

**NDSU**  
Extension Service  
North Dakota State University  
Fargo, North Dakota 58105  
MARCH 2009

Use the following equation to estimate the number of bags required per linear foot of dike for a dike with a base width that is three times the height.

$$N = (3 \times H + 9 \times H \times H) / 2$$

N – Number of bags required per linear foot of dike

H – Dike height (feet)

#### Example:

Estimate the number of bags required per linear foot for a dike 3 feet tall.

$$N = (3 \times 3 + 9 \times 3 \times 3) / 2 = 45 \text{ bags}$$


The *estimated* number of bags needed for 100 linear feet of dike is:

- 1-foot-high dike: 600
- 2-foot-high dike: 2,100
- 3-foot-high dike: 4,500
- 4-foot-high dike: 7,800

A common recommendation is to make the dike twice as wide as its height. This is a minimum width-to-height ratio that should be used. The estimated number of bags needed for this ratio is in the following table. This is based on each bag having placed dimensions of about 5 inches high by 9 inches wide by 14 inches long.


The *estimated* number of bags needed for 100 linear feet of dike that is twice as wide as its height is:

- 1-foot-high dike: 600
- 2-foot-high dike: 1,700
- 3-foot-high dike: 3,000
- 4-foot-high dike: 5,500
- 5-foot-high dike: 9,000

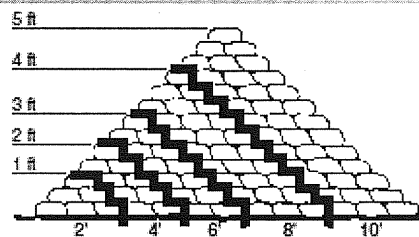

Estimated cubic yards of sand needed per 100 feet of dike length for various dike heights and ratios of height to width. An additional 2 cubic yards will be needed for bags to hold the plastic.

		Dike Height (ft.)								
		1.0	1.5	2.0	2.5	3.0	3.5	4.0	4.5	5.0
Cubic Yards of Sand	Width 3 x H	7	15	25	38	54	73	95	119	145
	Width 2 x H	6	11	18	27	38	50	65	82	100

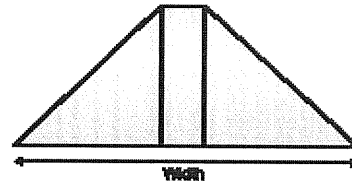

This volume is calculated based on a center section that is 9 inches wide and the remainder is in a triangular shape.


Contact your county emergency management office for information on where to obtain sandbags.

A cubic yard will fill about 100 30-pound sandbags or about 75 40-pound bags, assuming the sand weighs 110 pounds per cubic foot. Sand weighs 100 to 130 pounds per cubic foot, depending on moisture content and packing. A cubic yard is 27 cubic feet. Each 14-inch by 24-inch bag will hold about 0.4 cubic feet if filled about one-half full. Based on volume, each yard will fill about 67 bags one-half full.

### Site Selection



When selecting the location for the dike, take advantage of natural land features that keep the dike as short and low as possible. Avoid obstructions that would weaken the dike. Do not build the dike against a building wall due to the forces the dike may place on the building. Leave at least 8 feet to maneuver between the dike and buildings for observation, pumping seepage water and other activities.

Since friction holds a dike from sliding, create a good bond between the ground and the dike. Remove ice and snow since it will melt permitting water to flow under the dike. Remove anything else that is "slippery." If the dike is to be more than about 3 feet high, dig a bonding trench where the dike will be placed. The trench should be at least 4 to 6 inches deep and 18 to 24 inches wide.

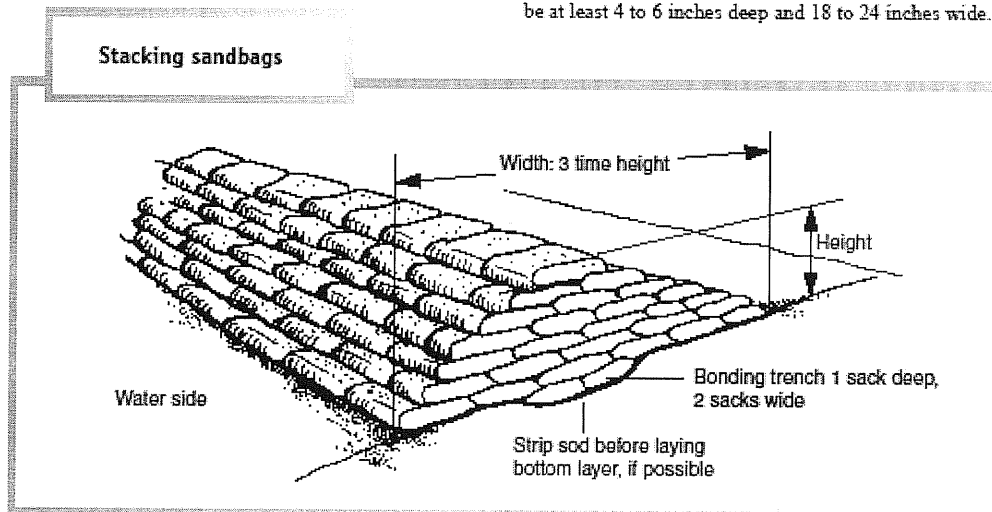

## ■ Filling Sandbags

Fill the bags about one-half full and do not tie them closed. Untied bags form into the dike better than tied bags. Filling sandbags usually is a two-person operation. One member of the team holds the bag on the ground slightly in front of his or her spread feet and the second shovels the sand into the bag. Use gloves to protect the bag holder's hands. The use of safety goggles is desirable, especially during dry and windy days. For large-scale operations, filling sandbags can be expedited by using bag-holding racks, funnels on the back of dump trucks used for sanding operations and various power loading equipment. However, the special equipment required is not always available during an emergency.

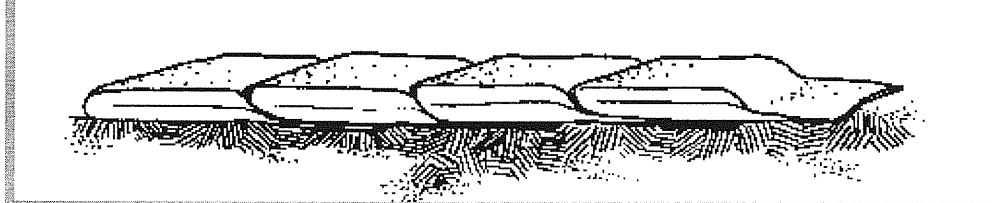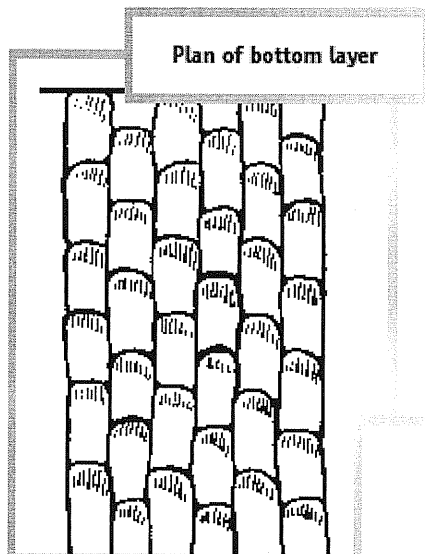


## ■ Stacking Sandbags


Lift bags using your legs and limit twisting of your back.

A triangular or pyramid shape for the dike is not necessary if the height will be 1 foot or less. Support the wall of sandbags with "clusters" of bags every 5 feet to stabilize the sandbag wall so it does not tip over from the force exerted by the floodwater.

Place the first layer of bags lengthwise on the dike (parallel to the flow), lapping the bags so the filled portion of one bag lies on the unfilled portion of the next, with the untied open end of the bag facing downstream. Offset adjacent rows or layers by one-half bag length to eliminate continuous joints, similar to what is done laying bricks. Compact and shape each bag by walking on it. Continue to walk on the bags as succeeding layers are placed to eliminate voids and form a tight seal.

The base of the dike should be about two to three times as wide as the dike is high to provide adequate friction surface area. Water exerts a tremendous force against the dike. Estimate the force on the dike base by multiplying the water depth by 62 pounds. For example, the force that 5 feet of water exerts on the base of a dike is about 310 pounds per square foot. Flowing water striking the dike exerts even more force on the dike. A triangular-shaped dike permits the weight of the water to push down on the dike to help hold it in place.

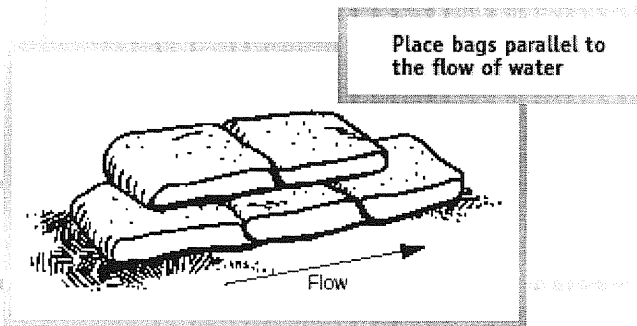

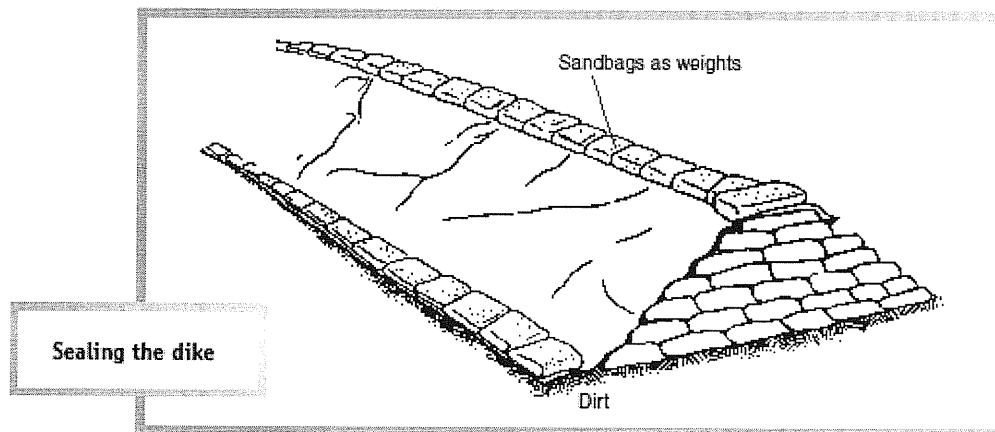

### ■ Sealing the Dike

The finished dike should be sealed with a sheet of plastic to improve water tightness. Spread a layer of soil or sand 1 inch deep and about 1 foot wide along the bottom of the dike on the water side. Lay polyethylene plastic sheeting so the bottom extends 1 foot beyond the bottom edge of the dike over the loose soil or sand. The upper edge should extend over the top of the dike. Poly sheeting at least 6 mils thick is preferred. It generally is available in 100-foot rolls from construction supply firms, lumberyards and farm stores. Do not put plastic sheeting under the bags since that will increase the potential for the dike to slide.

If more than one sheet of plastic is used, the poly sheeting should be placed from downstream to upstream and the next sheet upstream overlapped by at least 3 feet. Overlapping in this direction prevents the current from flowing under the overlap and tearing the poly loose.

Lay the plastic sheeting down very loosely. The pressure of the water will make the plastic conform easily to the sandbag surface. If the plastic is stretched too tightly, the water force could puncture it. Place a row of sandbags on the bottom edge of the plastic to form a watertight seal along the water side. Place sandbags to hold down the top edge of the plastic. Avoid puncturing the plastic with sharp objects or by walking on it.

Use a sump or skimmer pump to remove water that permeates through the dike. Use ground fault circuit interrupters on circuits or extension cords to reduce the risk of electrocution.

### ■ Managing Volunteers

A dike will fail if not built correctly, so training people on proper procedures for placing sandbags is very important. In the rush, volunteers will do something, but the result frequently is a dike that performs poorly or fails. Put a high priority on planning and organization. Identifying a supervisor for the project is recommended.

### ■ Disposing of Used Sand

Floodwater is generally considered as polluted, so sand from bags exposed to flood water should not be used for children's sand boxes.

---

The NDSU Extension Service does not endorse commercial products or companies even though reference may be made to tradenames, trademarks or service names.

This publication may be copied for noncommercial, educational purposes in its entirety with no changes. Requests to use any portion of the document (including text, graphics or photos) should be sent to [NDSU.permission@ndsu.edu](mailto:NDSU.permission@ndsu.edu). Include exactly what is requested for use and how it will be used.

For more information on this and other topics, see: [www.ag.ndsu.edu](http://www.ag.ndsu.edu)

County commissions, North Dakota State University and U.S. Department of Agriculture cooperating. North Dakota State University does not discriminate on the basis of race, color, national origin, religion, sex, disability, age, Vietnam Era Veterans status, sexual orientation, marital status, or public assistance status. Direct inquiries to the Chief Diversity Officer, 205 Old Main, (701) 231-7709. This publication will be made available in alternative formats for people with disabilities upon request. (701) 231-7881. 3M-3-09